



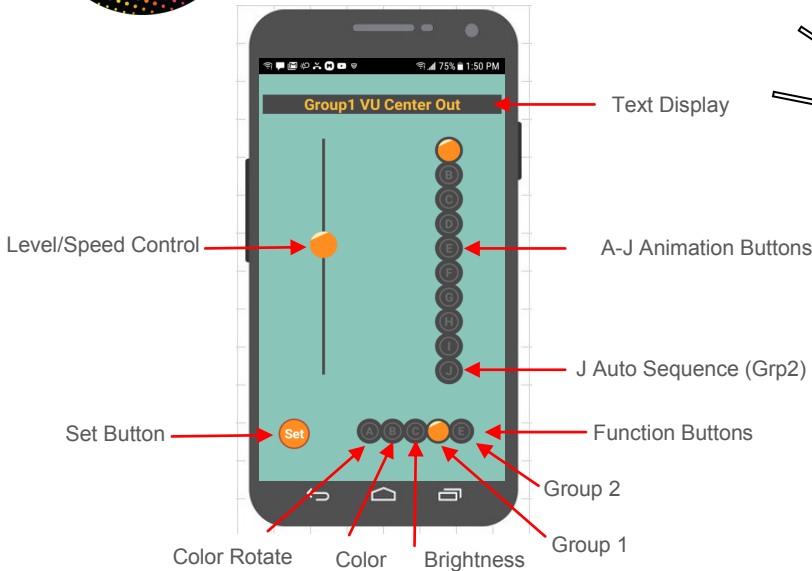

LyteJockey DJ

Simple Freedom

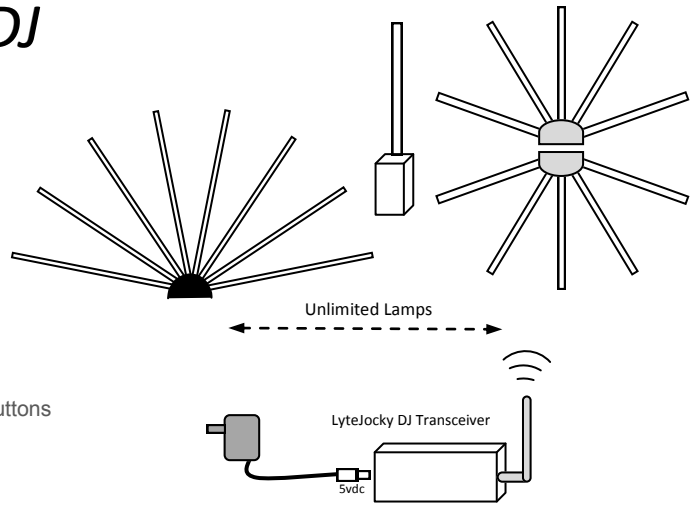

LyteJockey DJ System Diagram



VisuLyte LyteJockey is a single channel wireless Mobile device App controller for unlimited Lamps. Easy to operate music effects light show to create an entertaining performance. Just set colors and animations and functions to auto create new scenes continually keeping the DJ free to focus on the show. No PC ,no programming, no setup* required.

SET-UP



APP Download– Download “RemoteXY Free” App to your phone. Go to your phone settings, select connections and WiFi. With LyteJockey powered look for “**LyteJockeyXXX**” network and connect using password “**moodlyte**”. Open RemoteXY App then select + to add device network. Select “WiFi Point” connection and look for LyteJockeyXXX or <unknown network> and select. You may re-label the icon by press and hold of the icon button.

With LyteJockey phone screen operating, Power On all lamps then press and hold **Set Button** for 5 seconds to Learn Lamps. After five seconds all Lamps center LEDs will light green to indicate learned to system address and frequency.

OPERATION

All selected button functions are displayed in Text Display. You may disconnect from phone for untethered operation based on saved settings.

Animation Buttons - Group1 sound activated VU animations | Group2 static non-VU animations and Mic Gain & Auto Sequencing

Function Buttons - **A**-Color Rotate Speed, **B**-Hue Color, **C**-Brightness, **D**-Animation Grp1, **E**-Animation Grp2.

Color Rotate - (Function button A) - 0-99 speed of color rotation. 100 is Auto Beat Color. Both function levels can be saved.

Color Hue - (Function button B) - 0-254 color hue. Auto Beat Color overrides this function. Function level can be saved.

Brightness - (Function button C) - 0-100 % Function level can be saved.

Group1 - (Function button D) - Selects Group1 for Animation Buttons

Group2 - (Function button E) - Selects Group2 for Animation Buttons

Noise Floor - (Function button Group 2 & Animation button I) Move slider to set Noise Floor. Tap **SET** to save. Noise Floor is the minimum level of audio pick up to reduce background noise when no music is present. Too high of setting may cause loss of full scale VU.

Auto Scene Sequence - (Function button Group 2 & Animation button J) Move slider for 16 to 75 seconds for A-J Grp1 scene changes. Press SET to save. Level 15 selects **Beat Scene Random** and displays beat pulse # (updates every 20 beats) with random scene. Cannot be saved.

VU Beat Enhanced Mode On/Off- Select Group 2 & Animation J & Beat Scene Random mode (slider to top), then tap Set button. Center LEDs will light **Green** for **Enhanced On** or **Red** for **Enhanced Off**. **Enhanced Mode adds extra LED effects based on Beat**.

To save a Level or Speed; select function, adjust slider for desired level then tap Set Button. Text Display will acknowledge Saved.

NOTE: Adjust Color Rotate, Hue Color, Brightness **FIRST** then select desired animation. Saved levels are used.